

INSTALLATION INSTRUCTION
4" BULL BAR PRAT# 81501.50
1999-07 FORD F250/350/450/550HD SUPERDUTY
00-07 EXCURSION

NOTICE:

- λ The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
- λ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- λ Please periodically check and retighten all the hardware and clean the investment for a refresh look.

PART LIST:


No.	Name	Qty	Remarks
①	Bull Bar	1	
②	Hex bolt	4	M8×25
③	Flat washer	4	8mm
④	spring washer	4	8mm
⑤	Hex nut	4	M8
⑥	Mounting bracket	2	

STEP 1. NOTE : IT MAY BE NECESSARY TO REMOVE /RELOCATE FRONT LICENSE PLATE AND LICENSE PLATE BRACKET.IT IS NOT REQUIRED,BUT STRONGLY RECOMMENDED.IF LOCAL/STATE LAWS REQUIRES A LICENSE PLATE,LICENSE PLATE RELOCATION KIT 32-0055 IS AVAILABLE.LICENSE PLATE BRACKET MUST BE REMOVED ON 2005 AND NEWER VEHICLES

STEP 2. DETERMINE PASSENGER AND DRIVER BRACKETS.

STEP 3. LOCATE AND REMOVE FRONT BUMPER BOLTS THAT SUPPORT THE BUMPER TO VEHICLE.

NOTE: OT MAY BE NECESSARY TO HOLD THE FACTORY NUT PLATE FROM THE REAR OF THE BUMPER TO KEEP IT IN PLACE. ATTACH BRACKETS TO BUMPER AND REINSTALL BOLTS.LEAVE LOOSE.

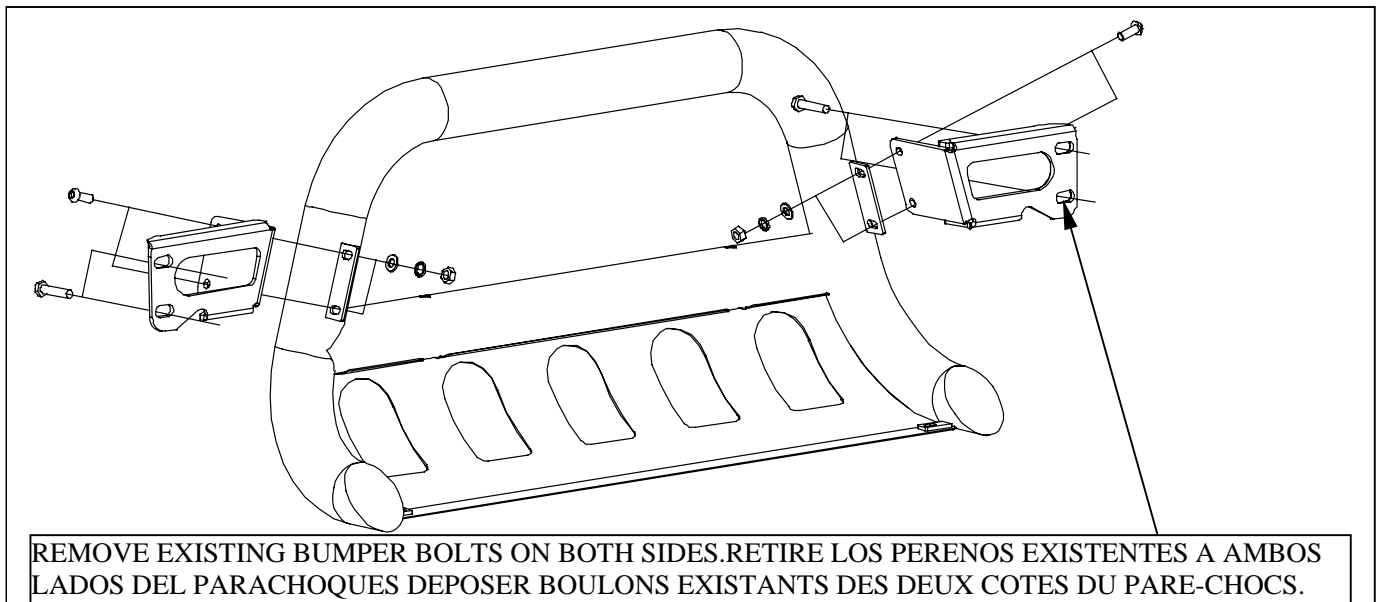

REMOVE EXISTING BUMPER BOLTS ON BOTH SIDES.RETIRE LOS PERENOS EXISTENTES A AMBOS LADOS DEL PARACHOQUES DEPOSER BOULONS EXISTANTS DES DEUX COTES DU PARE-CHOCS.