

INSTALLATION INSTRUCTIONS

**BULL BAR
07 TOYOTA TUNDRA
PART NUMBER 82501.24/82001.24**

PARTS LIST:

1	Bull Bar	4	12mm Nylock Nuts
4	12-1.75mm x 30mm Hex Head Bolts	8	12mm ID x 30mm OD x 3mm Flat Washers

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
2. From underside of vehicle, locate and remove the factory tow hooks from vehicle (Figure 2). Save bolts for later use. **NOTE:** Factory tow hooks are not compatible with Bull Bar, so you won't be re-installing factory tow hooks.
3. Locate Passenger Side Mounting Bracket and loosely attach it to vehicle by using the factory bolts removed in step two (Figure 3). Passenger Side shown in Figure 3. Repeat this step for Driver Side Mounting Bracket.
4. With help position the Bull Bar on the outer side of the Mounting Brackets. Attach Bull Bar to Mounting Brackets with the included (4) 12-1.75 mm x 30mm Hex Head Bolts, (4) 12mm Nylock Nuts, and (8) 12mm Flat Washers (Figure 3).
5. Level and adjust the Bull Bar and tighten all hardware at this time.
6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

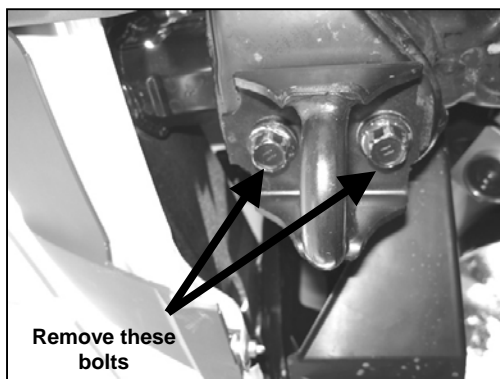
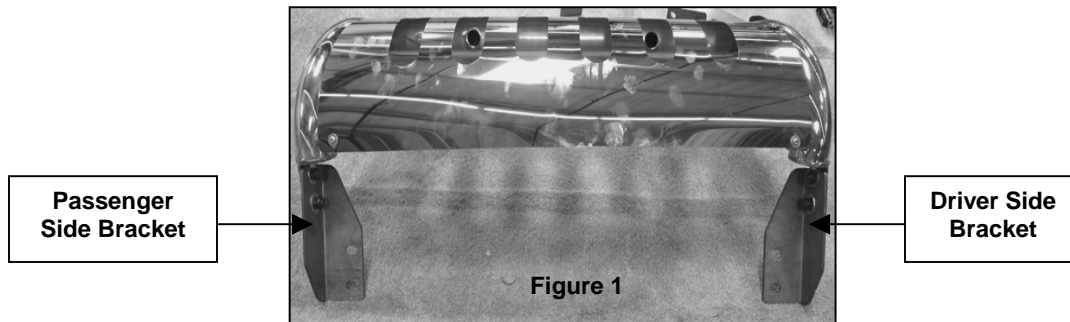


Figure 2

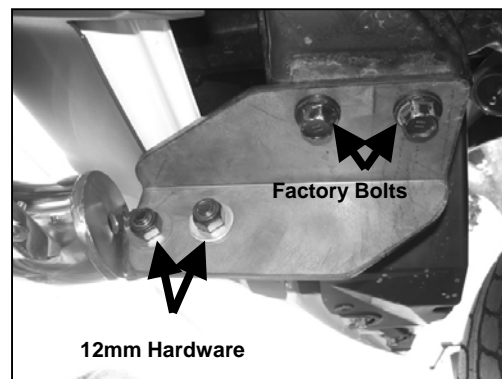


Figure 3